


SHINY KUNAI QUICK GUIDE

Thank you for purchasing a Shiny Knife! Here are a few things you should know:

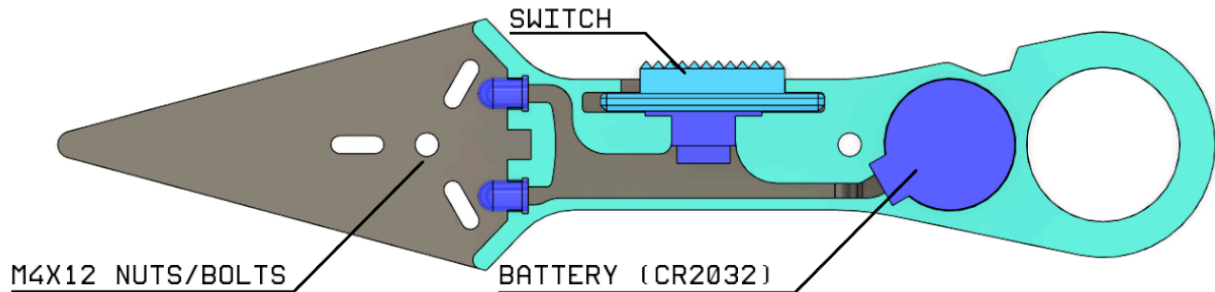

Operation:

- Slide the switch forward to activate LEDs.
- Note: Throwing the Kunai may break the blade tip or alignment tab.

Maintenance:

- Required tool: 2.5mm hex wrench.
- Battery type: (1) CR2032 coin cell. Non-rechargeable. 24hr+ est. run time.
- Battery swap: Unscrew the (2) M4x12mm bolts. Remove the blade, then split the handle halves. Replace the battery.
- **IMPORTANT:** After inserting a new battery, ensure a solid connection by pressing down on the battery and bending the battery retention tab down enough to hold the battery tightly.

Troubleshooting:

- If one or both LEDs dim intermittently, the battery may have loosened. Perform the battery tab bending maintenance described above.
- If the LEDs do not work at all, try replacing the battery. If this does not solve the issue, there may be an electrical problem that would require soldering to repair. Contact me through starsidearmory.com.
- Feel free to contact me with any other issues!

I'm always working on new sci-fi gear! If you like this kind of stuff, follow @starside_armory on Instagram for updates. Thanks again for your support, I couldn't do this without you!

See you starside,